



OPERATING INSTRUCTIONS

Fruit & Veg Juice Extractor



MODEL: K3151

thank you

Thank you for the purchase of this quality **HEALTH KICK** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference. Remove all packaging before use.

FEATURES

- Easy Clean Premium Food Grade 304 Stainless Steel Cabinet
- 850w powerful long-life copper motor
- Large 75mm diameter full apple feeding tube
- 2 speeds for hard and soft fruit & vegetables
- 1ltr dishwasher safer juice jug
- 1.5ltr easy clean pulp waste container
- 1x cleaning brush
- Non-drip function
- Dishwasher Safe
- Antiskid silicone feet
- Includes:
 - FREE Beginners Food, Health and Nutrition Guide
 - FREE Nutritional Juicing Recipe Book

SPECIFICATIONS

Operating Voltage: 220-240v~ 50/60Hz

Wattage: 850w

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- Always unplug when not in use.

- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.

DO NOT

- Do not use outside or in damp conditions.
 - Do not use for any purposes other than the appliances intended use.
 - Do not use if any part of this appliance is damaged in any way.
 - Do not leave unattended when in use.
 - Do not clean with metal scouring pads. Pieces of the pads can break off and touch electrical parts involving a risk of electric shock.
 - Do not use if the centrifugal sieve bowl has been damaged or torn.
 - Do not use for more than 3 minutes continuous use. Then allow to cool down for 7 minutes before using again.
-
- Never use fingers, kitchen utensils or similar to push ingredients down the feeding tube. Use the supplied Food Plunger only.
 - Never stick fingers or other objects into the spout.
 - Never touch the moving parts of the appliance until it has come to a complete stop.
 - The centrifugal sieve bowl must be handled with care, as it contains sharp parts.

LOCATION OF CONTROLS

A. Food Plunger

B. Pulp Waste Container

C. Motor base unit

D. Locking mechanism

E. Spout

F. Juice Collection Tray

G. Centrifuge sieve bowl

H. Power cord with plug

I. Food Feeding Tube

J. Lid

K. On/Off button



Suitable for use with any British Standard
220-240v~50Hz mains supply.

OPERATION

■ BEFORE FIRST USE

Ensure that the unit is assembled correctly before use and that the juice jug is underneath the spout.

■ ASSEMBLY BEFORE USE

1. Place the motor section (C) on a flat surface, e.g. a kitchen counter, and make sure it is standing firmly on the four suckers underneath.
2. Place the Juice Collection Tray (F) on the motor section so that the spout (E) fits in the slot on the side of the motor section.
3. Push the Pulp Waste Container (B) up under the drain edge on the base so that it locks on the foot of the motor unit tightly.
4. Carefully lock the centrifuge sieve bowl (G) onto the base.

Note: Be careful not to touch the sharp parts in the bottom of the centrifuge sieve bowl. Make sure that the

centrifuge sieve bowl sits properly on its base, so that the gear on the bottom of the bowl engages the gear in the base. Make sure that the centrifuge sieve bowl doesn't sit too loosely on the base and that it rotates evenly.

5. Place the lid (J) on the appliance so that it covers both the fruit pulp holder and the centrifuge bowl unit. Make sure that the lid fits tightly onto the base.
6. Turn the lock mechanism (D) to the vertical position and make sure that it engages the lid and locks it fast. The lock mechanism makes a clicking sound when this is done correctly.
7. Place the juice jug or other suitable container under the spout.
8. The apparatus now ready for use.

■ PREPARING FRUITS AND VEGETABLES BEFORE USE

1. Place the lid (J) on the appliance so that it covers both the fruit pulp holder and the centrifuge bowl unit. Make sure that the lid fits tightly onto the base.
2. Turn the lock mechanism (D) to the vertical position and make sure that it engages the lid and locks it fast. The lock mechanism makes a clicking sound when this is done correctly.
3. Place a glass, bowl or other suitable container under the spout.
4. The apparatus now ready for use.

■ HOW TO USE

Start the appliance by turning the On/Off switch to position "1" (low speed) or position "2" (high speed).

- The low speed setting is suitable for juicing soft fruits and vegetables.
- The high speed setting is suitable for juicing harder fruits and vegetables.

Feed the selected fruits and/or vegetables into the appliance through the Feeding Tube a little at a time, pushing them down using the Food Plunger (A).

DO NOT

- Do not force or press too hard as this may damage the sieve.

Make sure that you turn the Food Plunger so that the groove in the tamper fits into the funnel properly.

- Long vegetables such as carrots should be fed into the funnel pointy end first.
- Press the fruits and/or vegetables gently with the funnel. Too much presser reduces the amount of juice extracted and can damage the appliance.
- Stop the appliance before removing the Food Plunger to add more fruit/vegetables in order to avoid splashes.

Keep an eye on the fruit pulp holder and stop juicing before the holder becomes too full.

Always turn off the power by turning the "On/Off" switch to "0" position before taking off the lid.

CAUTION

- Do not use continuously for more than 3 minutes. Pause for 7 minutes before reusing to allow to cool down, and to avoid the motor from overheating.

CLEANING AND CARE

Always unplug from supply before cleaning.

Separate each part carefully.

Lower the locking mechanism to horizontal position start separation.

Remove the Food Plunger and the lid.

Remove and empty the Pulp Waste Container.

Carefully lift the centrifugal sieve bowl from the motor unit.

The Sieve contains sharp blades, care should be taken.

The Juice Collection Tray can then be easily lifted away.

All these parts can be placed in the dishwasher or cleaned in the sink.

The main motor body should be cleaned with a damp soft cloth only.

DO NOT

- Do not submerge the motor unit in water.
- Do not use harsh abrasives, wire wool, or abrasive pads when cleaning any parts of this unit.


WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

FITTING A NEW UK PLUG

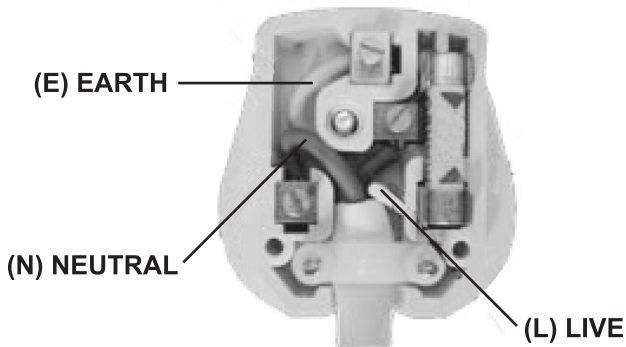


Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 5 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.

 **healthkick CUSTOMER SERVICES**

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Health Kick products, visit www.lloytron.com

WARRANTY

An additional manufacturer's warranty is available with this product which requires registration within the first 28 days of purchase to activate. Follow the instruction on the Warranty Leaflet supplied with this product. Your statutory rights are not affected. Consumables are excluded. The model number and batch number of this product can be found on the rating plate of the appliance.



Distributed by Lloytron Plc, Laltex House, Leigh, England WN7 3XH