

NON-STICK ROASTING TINS

Please read the following care and use information to obtain the best results from your purchase.

Before using for first time:

- 1 Remove all labels and wash product in warm soapy water, rinse and dry.
- 2 Heat cookware on a low heat with some butter or cooking oil, this will allow the non-stick surface to bond to the inner metal surface properly therefore improving the effectiveness and prolonging the life of the non-stick surface.
- 3 To ensure that the surface remains in good condition, please repeat the above process periodically.
- 4 **Do not use a high heat when cookware is empty.** For best results use your cookware on a low to moderate heat when cooking.
- 5 **Do not use metal utensils with this product.** To prolong the life of the inner coated surface, always use wooden or plastic utensils.
- 6 **Do not cut the cooking interior surface of this cookware.**
- 7 **Cleaning instructions** - simply wash cookware in warm soapy water with a cloth or a sponge. This product may also be cleaned in a dishwasher.
- 8 **Do not use abrasive cleaners, scouring pads or powders** as this will damage the non-stick coating. If excessive cleaning is required, use plastic or nylon scouring pads.

CAUTION: Always allow cookware to cool before placing in cold water.

All care has been taken to ensure that this product has reached you in perfect condition.